



320 W. Larch Rd. #16  
Tracy, CA 95304  
(209) 832-8890  
centralvalleypartyrentals.com  
facebook.com/centralvalleyparty

## Coffee Maker

### Operating Instructions

1. Fill Coffee Pot with cold water to desired level
2. Add coffee to basket (see ratio below).
3. Plug coffee maker into standard electrical outlet.
4. When coffee is finished brewing, remove the basket. The pot will keep the coffee hot.

### Cleaning Instructions

Rinse out coffee pot and basket before returning. NEVER IMMERSE COFFEE MAKER IN WATER.

### Coffee Equivalents

Number of Cups	Coffee Measure
30	2 cups
50 to 60	3 ½ cups
90-100	4 cups

One pound of coffee is equal to approximately 4 ¾ cups of ground coffee.

REMEMBER you are renting this equipment. Be sure you are aware of the terms of your rental contract. Always return your coffee maker clean to avoid additional cleaning charges.

**THIS MACHINE IS NOT TO BE RUN ON A GENERATOR**