



320 W. Larch Rd. #16
Tracy, CA 95304
(209) 832-8890
centralvalleypartyrentals.com
facebook.com/centralvalleyparty

Cotton Candy Machine

Instructions

1. Place bowl and bubble (optional) on the machine.
2. Plug in machine.
3. Flip "MOTOR SWITCH" to "ON" position.
4. WITH MOTOR RUNNING, fill floss head about 90% full with sugar (DO NOT OVER FILL). There may be a vibration type noise while filling the head. This noise will go away when the head is full. Always fill the floss head to 90% full. Always add sugar with the motor running to avoid damaging the machine.
5. Place the "HEAT SWITCH" to the "NORMAL" position.
CAUTION: If the sugar is smoking, or it smells as if sugar is burning, reduce the heat to avoid damaging the machine.
6. Floss will begin to come out of the head and cling to the side of the bowl. Spin cotton candy cone around outside of the bowl to collect candy.
7. Turn off heat, and allow the head to spin for 1 minute before turning off the motor.

THIS MACHINE IS NOT TO BE RUN ON A GENERATOR