



320 W. Larch Rd. #16  
Tracy, CA 95304  
(209) 832-8890  
centralvalleypartyrentals.com  
facebook.com/centralvalleyparty

## Popcorn Machine

### Instructions

1. Turn on light, warmer, kettle heat, & kettle motor switches.
2. Allow machine to warm up for approximately 5 minutes.
3. Add contents of one All-in-One popcorn kit that was provided with your machine.
4. When popping slows, empty kettle.
5. Repeat as necessary

When finished popping, turn off kettle heat and kettle motor switches. Leave light and warmer switch on the keep the popcorn fresh and warm.

**THIS MACHINE IS NOT TO BE RUN ON A GENERATOR**